

ACO Environment


Oleopator P Oil-Water Separator

Maintenance Guide

1. Remove the cover.
2. Remove the coalescence unit and float by pulling them upward.
3. Empty contents. This should be done by a licensed operator. Lower a suction pipe into the tank gently to prevent damaging separator inside parts.
4. Clean the inside of the separator tank, coalescence unit and float with room temperature water—**no soaps or pressured water**. Clean alarm sensors if present.
5. Fill the separator with room temperature water and ensure the water flows freely through the outlet pipe; level will not rise once the water level reaches outlet pipe invert.

NOTE: Do not leave separator empty after service.

6. Reinstall the clean float. Ensure that the float moves freely up and down within the coalescence cage.
7. Reinstall the clean coalescence unit.
8. Reinstall the cover.

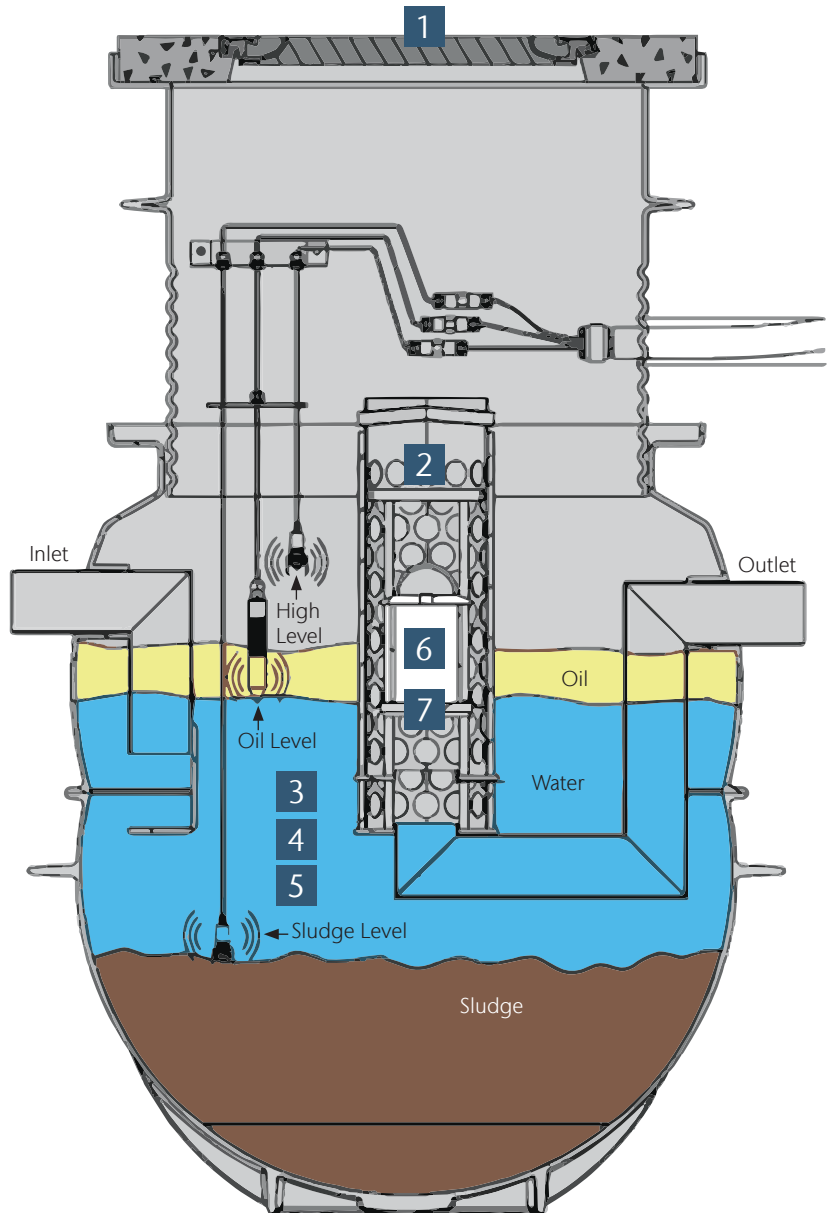

ACO, Inc.

West Sales Office
825 W. Beechcraft Street
Casa Grande, AZ 85122
Tel: (520) 457-9988
Toll-Free: (888) 490-9552
Fax: (520) 457-9899

Northeast Sales Office
9470 Pinecone Drive
Mentor, OH 44060
Tel: (440) 639-7230
Toll-Free: (800) 543-4764
Fax: (440) 639-7235

Southeast Sales Office
4571 Pleasant Road
Fort Mill, SC 29708
Toll-Free: (800) 543-4764
Fax: (803) 802-1063

info@acousa.com
www.acousa.com

November 2020
Print #EN400

ACO. creating
the future of drainage

